


Connecting your Digital Signage to your Wifi


1. Restart your device
2. At the Skykit Loading screen a **Gear** icon will appear in the bottom left corner of the screen. Using the device remote, select the Gear icon

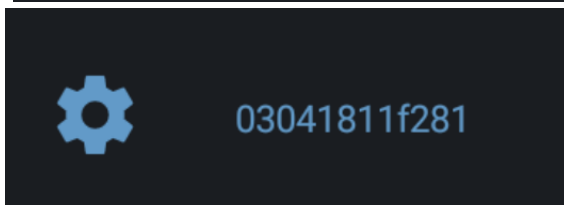

3.



4. The **Device Setup Page** will start.

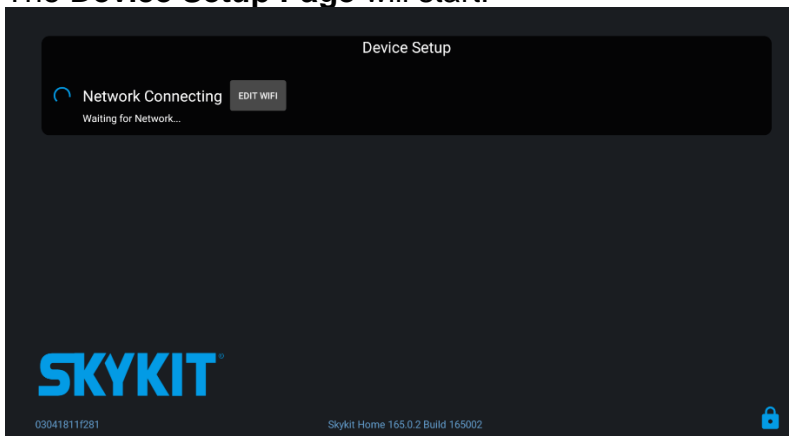

5. Use your remote to select **Edit Wifi** to open a new window that will show your available networks
6. Connect to your network
7. Once your device has successfully connected to the internet, it will check to make sure all apps are up to date and continue playing your content.